

NEWTON 375/450 FC





Sammode

Notice de montage




Mounting instruction

Montageanweisung

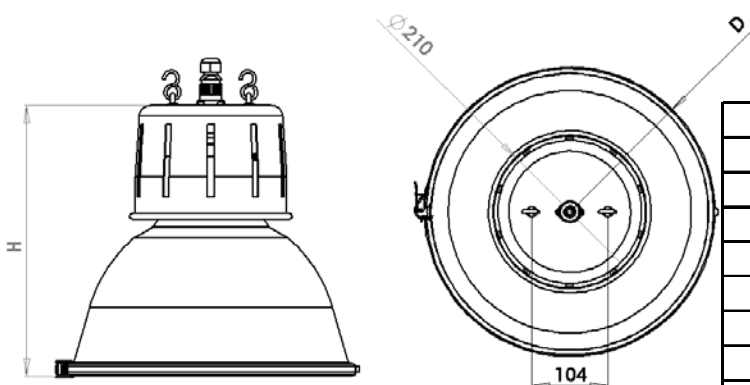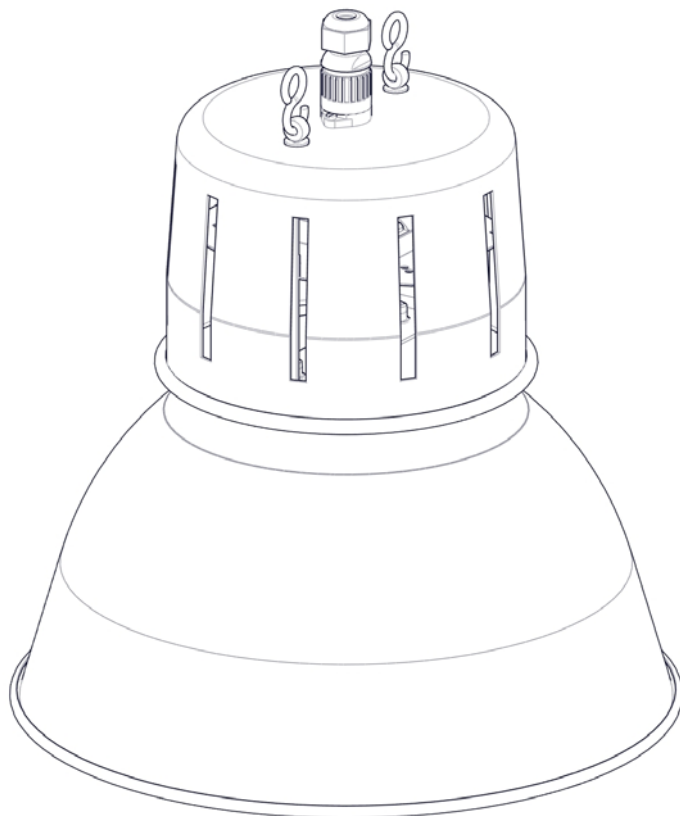


406	465	2x42 W	1140 0040
406	465	1x42 W	1140 0030
406	465	2x26 W	1140 0020
406	465	1x26 W	1140 0010
362	393	2x42 W	1130 0040
362	393	1x42 W	1130 0030
362	393	2x26 W	1130 0020
362	393	1x26 W	1130 0010
H	D	TYPE	Reference


FPY / FPO / FPC (Options)

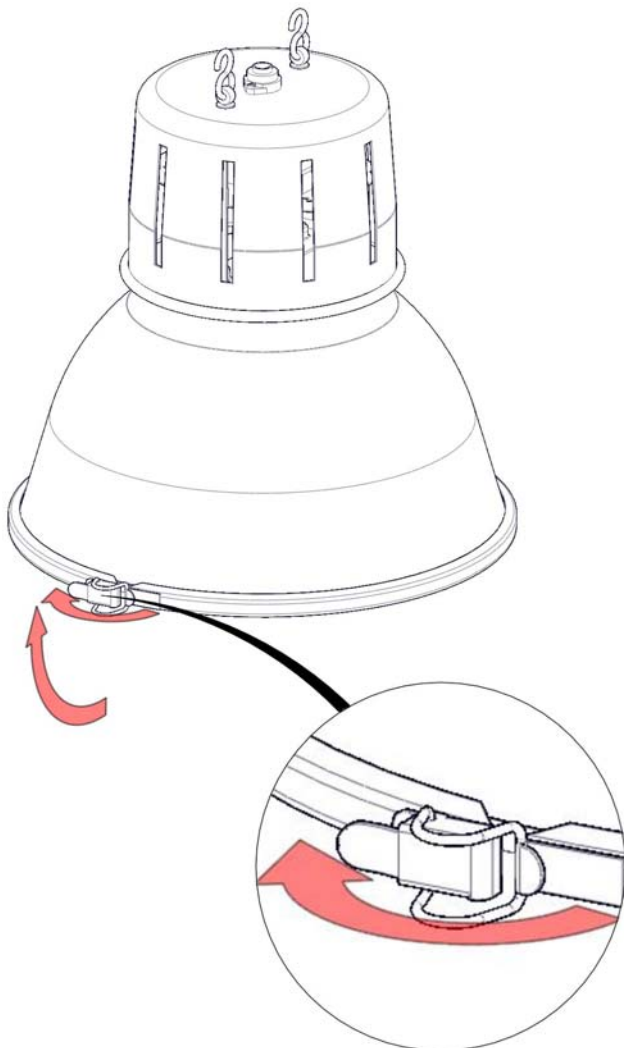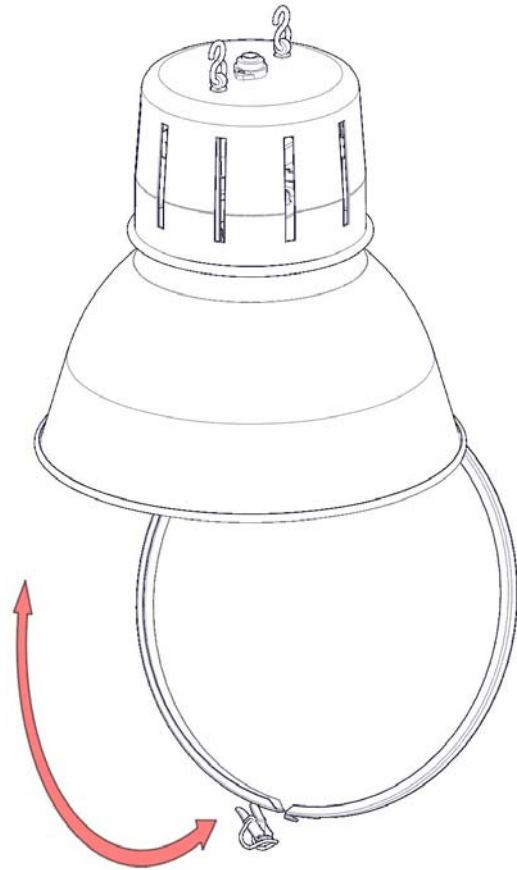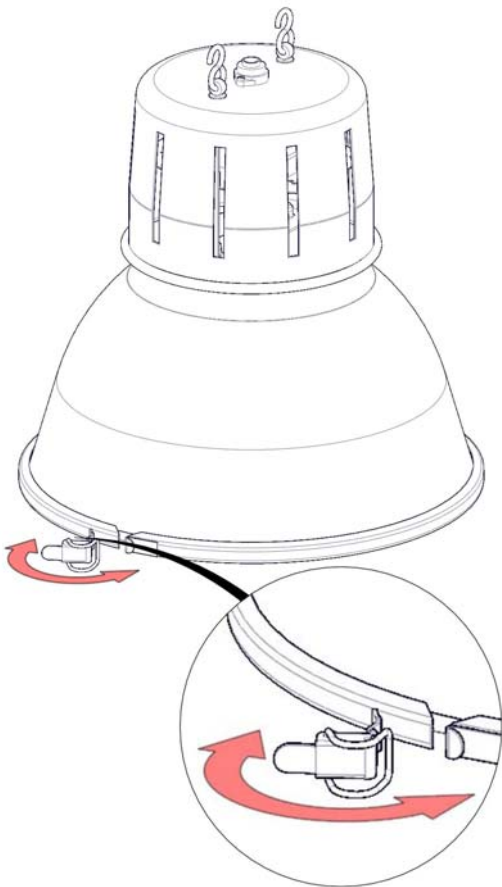


1.

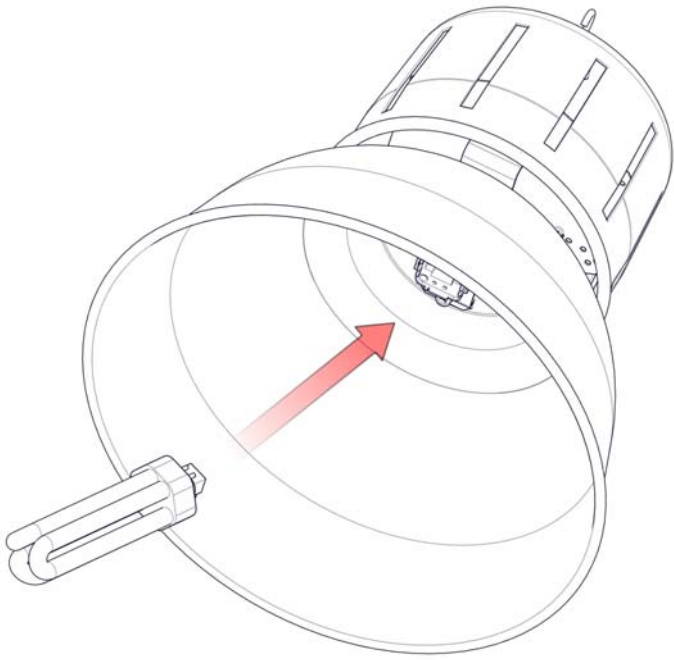


2.

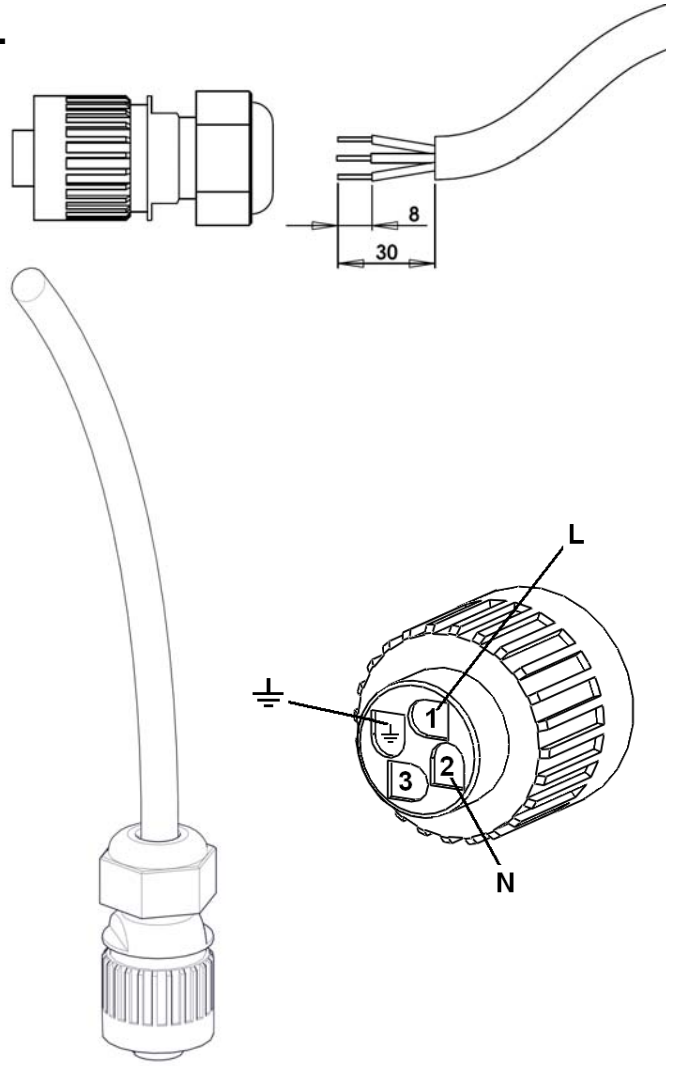

3.

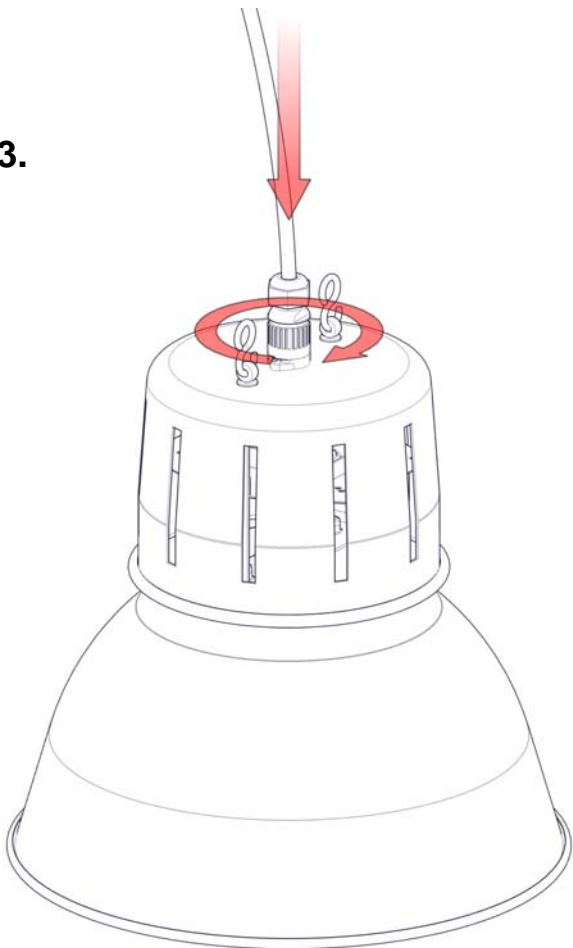


4.

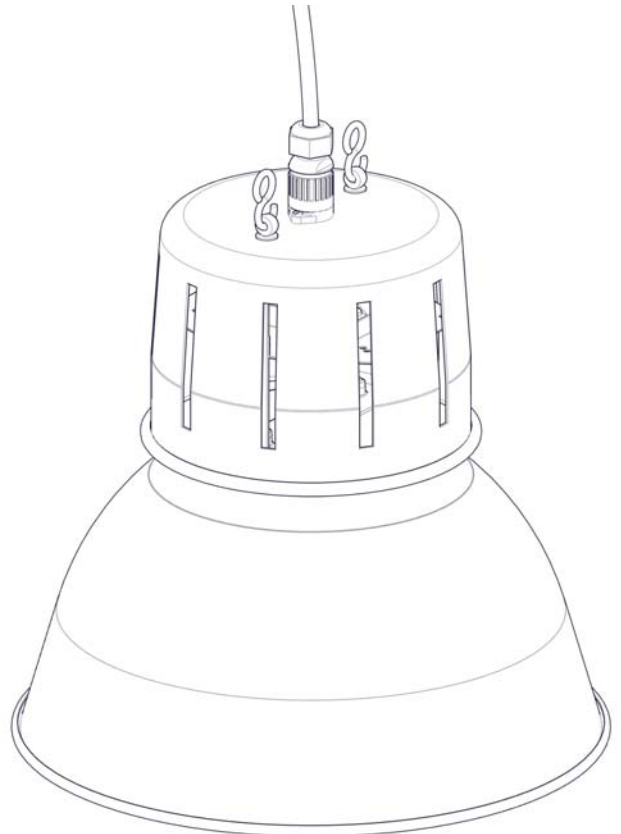


Changement de Ballast / Replacement of Ballast :


1.

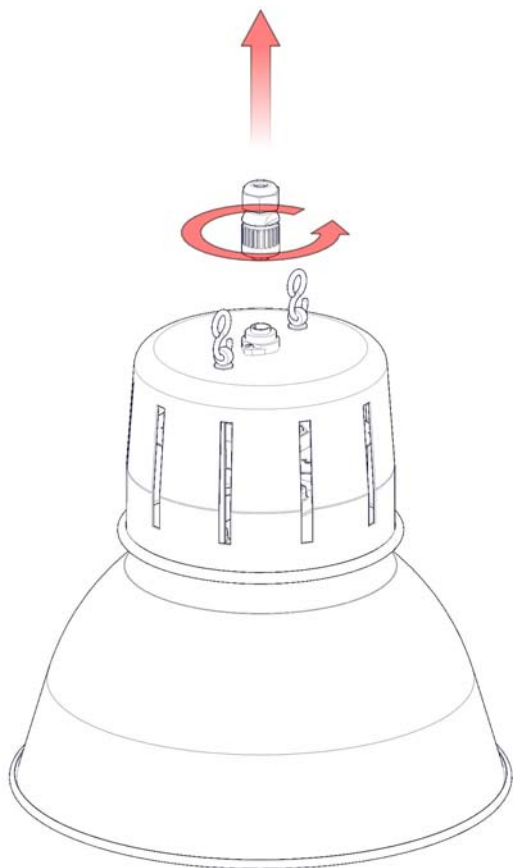

2.

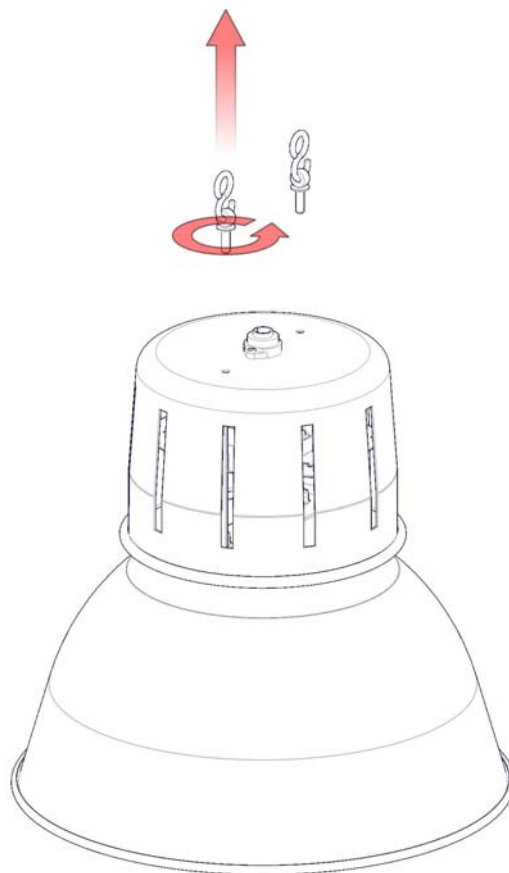

3.

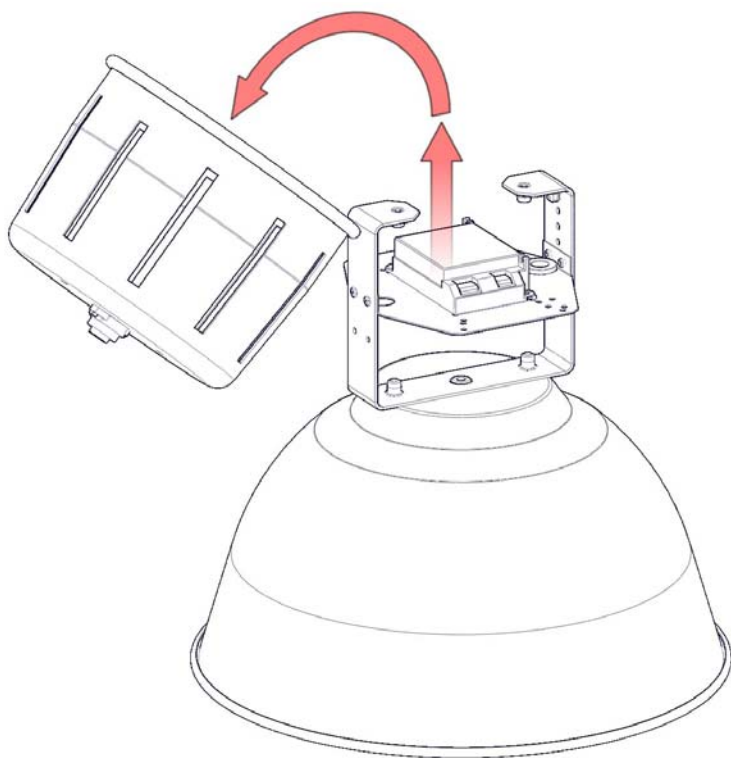

4.

